

<b>Model</b>	<b>GTB-1200</b>	
Maximum input power	1200Watt	
Peak power tracking voltage	22-50V	
Min / max starting voltage	22-55V	
Maximum DC short-circuit	60A	
Maximum input operating current	54.5A	
<b>Output Data</b>	<b>@120V</b>	<b>@230V</b>
Peak power output	1200Watt	1200Watt
Rated output power	1200Watt	1200Watt
Rated output current	10A	5.2A
Rated voltage range	80-160VAC	180-260VAC
Rated frequency range	48-51/58-61Hz	48-51/58-61Hz
Power Factor	>99%	>99%
Max unit per branch circuit	3pcs ( Single-phase )	3pcs ( Single-phase )
<b>Output Efficiency</b>	<b>@120V</b>	<b>@230V</b>
Static MPPT efficiency	99.5%	99.5%
Maximum output efficiency	95%	95%
Night time power consumption	<1W	<1W
THD	<5%	<5%
<b>Exterior &amp; Feature</b>		
Ambient temperature range	-40°C to +60°C	
Dimensions ( L × W × H )	365mm×300mm×40mm	
Weight	2.81kg	
Waterproof rating	IP65	
Cooling	Self-cooling	
Communication Mode	WiFi mode	
Power transmission mode	Reverse transfer , load priority	
Monitoring System	Mobile APP, PC browser	
Electromagnetic Compatibility	EN50081 part1 EN50082 Party1	
Grid disturbance	EN61000-3-2 Safety EN62109	
Grid detection	DIN VDE 0126	
Certificate	CE, BIS	

- ★ Please connect the inverter following the operation instruction shown above. If have any question please contact with relative persons.
- ★ Non-professionals do not disassemble. Only qualified personnel may repair this product.
- ★ Please install inverter in the low humidity and well-ventilated place to avoid the inverter over-heating, and clear around the inflammable and explosive materials.
- ★ When using this product, avoid children touching, playing, to avoid electric shock.
- ★ Connected solar panels, battery or wind generators DC input DC power supply cable.

1. One warranty card;
2. One user manual;
3. One certificate of quality;
4. 1 pouch of screw for micro inverter installation;
5. One AC Cable;

- 1.Red light 3 second---Red LED light 3 second while device starts, then in working condition;
- 2.Green flash fast---MPPT searching;
- 3.Green flash slow---MPPT + searching;
4. Red flash slow---MPPT - searching;
- 5.Green lights on 3s and off 0.5s---MPPT locked;
- 6.Red light steady---a.Islanding protection;
- b.Over-temperature protection;
- c.Over / low AC voltage protection;
- d. Over / low DC voltage protection; e.Fault

Remarks:

LED flashing in the process of being working condition:inverters connected to AC & DC sides→ Red LED light 3 second→Green LED flash fast(MPPT searching)→Green LED flash slow(MPPT + searching) / Red LED flash slow (MPPT - searching) / reen LED lights on 3s and off 0.5s (MPPT locked) .







Diagram illustrating the DC Solar Panel Input Cable connector. The cable has a central positive terminal (marked with a '+' sign) and a negative terminal (marked with a '-' sign). The cable is shown connected to a DC Solar Panel Input Cable.

AC Output Cable

**Step6** Finally, please connect the AC main cable to the utility grid.

The diagram illustrates a solar panel array configuration. It shows three GTB-1200 inverters connected in parallel. The output of the array is connected to a meter and a ground connection. The wiring is color-coded: N (Blue), L (Blown), and G (Yellow & Green).

1. Download 'smart home' or direct scan code to the right qr code and install the monitoring system app(the multi-language language of the ios system);
2. Click and create the new user to register the account;
3. Please enter the password and confirm the password when you enter the password in the family.
4. After entering the wi-fi password, the inverter will remain in the normal working green light state, and the system will make a paired connection (as shown in figure 5 and 6).

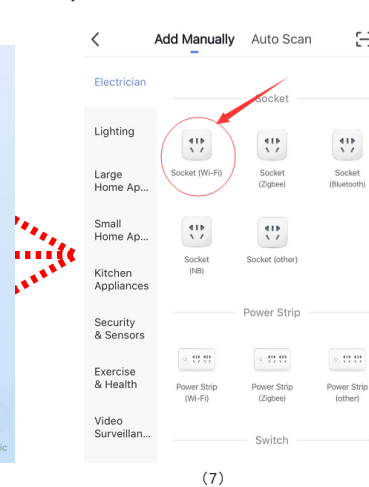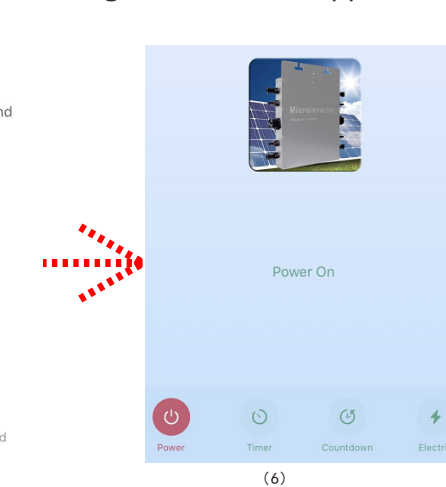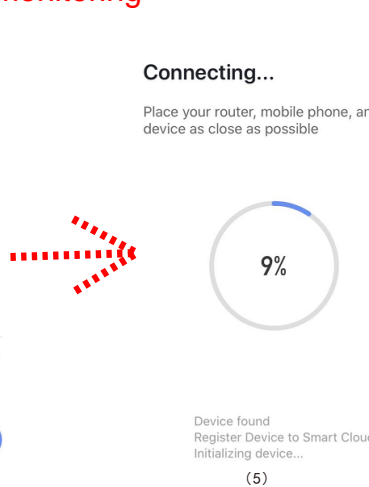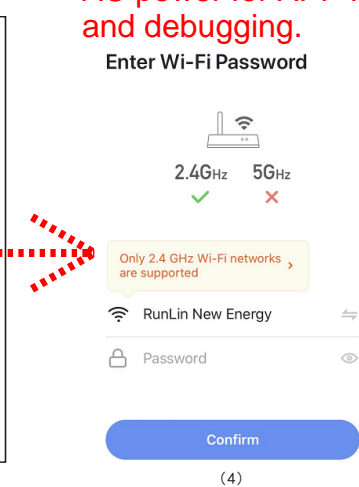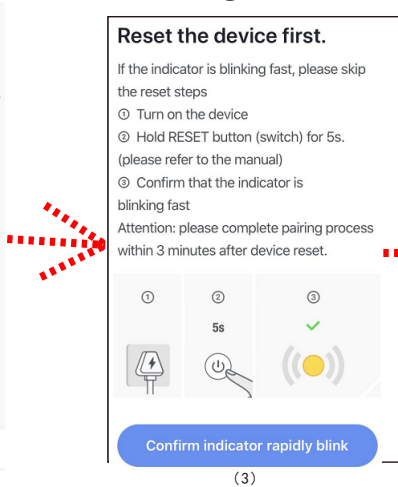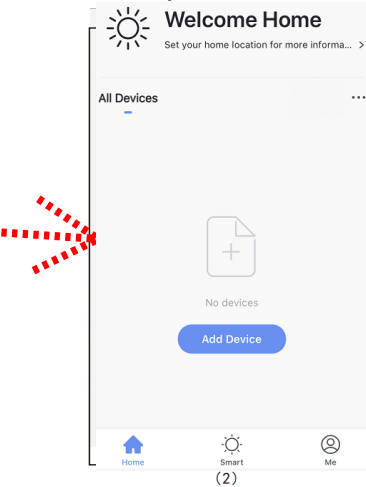

The diagram illustrates a three-phase PV system. On the left, there are three parallel PV arrays, labeled PV Array A, PV Array B, and PV Array C. Each array consists of four strings of solar panels, each string containing four panels. The panels are connected in series within each string, and the strings are connected in parallel to form the array. Each array is connected to a three-phase meter and a three-phase distribution unit. The meter is a three-phase meter with three input terminals and three output terminals. The distribution unit is a three-phase unit with three input terminals and three output terminals. The wiring is color-coded: N (Blue), L (Blown), and G (Yellow & Green). The meter is connected to the distribution unit, and the distribution unit is connected to the ground. The ground is labeled 'Ground'.

After the inverter is added correctly, and the photovoltaic system is in normal operation during

5. After the inverter is added correctly, and the photovoltaic system is in normal operation during grid-connection, it will be shown that the inverter is turned on (see figure 6).)

6. If the inverter is not running in the current network, it will be shown as the inverter is closed (see figure 7).

7, click each inverter, will be able to view the inverter data statistics, more functions, please click in the APP to check

Note: install multiple inverter app monitoring operation procedure. (the system is designed for the future lot of Internet 5g, with all home appliances compatible)